

SERVICE MANUAL

FOR

MODEL WPP-531-X

**HANDS FREE EMERGENCY
WEATHERPROOF TELEPHONE**

OR

MODEL SSP-511- X

**HANDS FREE STAINLESS STEEL
PANEL TELEPHONE**

EQUIPPED WITH SPK1.07 FIRMWARE



Serving the Telephone Industry Since 1930

*Communication Equipment
& Engineering Company*

1580 NW 65th Avenue

Plantation, FL 33313

Voice: 954-587-5430

Fax: 954-587-5440

IMPORTANT INFORMATION FOR CUSTOMER

Please fill in before you continue.

The following information is necessary when calling CEECO for assistance.

MODEL NUMBER	MODEL WPP-531-X OR SSP-511-X EQUIPPED WITH SPK1.07 FIRMWARE.
SERIAL NUMBER	
DATE MANUFACTURED	
LOCATION INSTALLED	

For us to better serve you, please have this information available when calling for technical support.

CEECO Communication Equipment & Engineering Company

1580 NW 65th Avenue
Plantation, FL 33313

(954) 587-5430 Voice
(954) 587-5440 Fax

TABLE OF CONTENTS

<u>SECTION</u>	<u>PAGE</u>
1.0 INTRODUCTION.....	4
2.0 GENERAL.....	4
3.0 PROGRAMMING	5
PROGRAMMING CONTINUED.....	6
PROGRAMMING CONTINUED.....	7
4.0 OPERATION	7
5.0 RECOMMENDED TOOLS AND TEST EQUIPMENT	7
6.0 INSTALLATION NOTES AND ASSEMBLY INSTRUCTIONS	8
7.0 TESTING.....	10
8.0 SPECIFICATIONS.....	11
9.0 PARTS LIST	12
10.0 FCC NOTICE.....	13
11.0 REPAIR AND RETURN INFORMATION.....	14
12.0 WARRANTY POLICY	15
13.0 DIAGRAM.....	16

1.0 INTRODUCTION

The practices in this manual provide installation and maintenance information for the CEECO Model WPP-531-X Hands free Weatherproof Telephone or Model SSP-511-X Stainless Steel Panel Telephone, equipped with SPK1.07 firmware.

The information in this manual is subject to change without notification.

For information not included in this manual, please call or write:

CEECO
Customer Service
1580 NW 65th Avenue
Plantation, FL 33313

(954) 587-5430
(954) 587-5440 FAX

2.0 GENERAL

- 2.1 The CEECO Model WPP-531-X Hands Free Weatherproof telephone is a sturdy, vandal resistant, stainless steel weatherproof speakerphone. Instead of a hookswitch and handset, the WPP-531-X has a Press to start/Press to stop button for initiation and termination of phone calls. This Emergency button is provided for automatic ring down applications. Ordinarily, the telephone can only be used to receive calls. The telephone may, however, be used to initiate calls **if** it is used in conjunction with external call equipment (i.e. programmable switch, ring down circuit, etc...) The Model SSP-511-X is the same telephone without the weatherproof housing. Manual volume controls for the microphone and speaker are provided inside the phones.
- 2.2 Incoming calls may be allowed or blocked depending on the programming.
- 2.3 Programming is accomplished via the DTMF keypad.

3.0 PROGRAMMING

- 3.1 Remove the front stainless steel panel by loosening the four security screws with a security tool (sold separately) and remove them. Remove the panel and attached telephone assembly.
- 3.2 **Connect the telephone** to a working telephone line or a DTMF test set.
- 3.2 Locate the pair of plastic **mini-jumpers** located near the edge of the printed circuit board. Move them to the “ON” or innermost position, as depicted on the last page of this manual.
- 3.3 Locate the programming keypad, which is either mounted on the back panel or provided on the side. If the keypad is packaged separately, locate the multicolored ribbon cable with white connector, which extends from the PC Board of the phone. **Connect the keypad** to that connector.
- 3.4 Each programming location is accessed by dialing the "#" sign and the two digit code, which corresponds to that location. The only valid program locations for this phone is #00. The previous contents of the location are automatically erased when the location code is dialed.
- 3.5 **Press the “CALL & HANGUP”** button and wait to hear dial tone.
- 3.6 Using the keypad, **enter # 9 7 # 1 8 #**. This will **clear all** user programmable memory to begin programming.
- 3.7 Location "00" is the telephone options location. By entering a number of 1-9 into each of the 10 digits, the phone is customized for the particular installation.
- 3.8 **Enter #00 followed by ten digits**, as selected on the next page. This “X” model phone only offers selections for Digits 2, 3, and 10 on the next page. It is recommended that a “5” be entered under Digit 10.

NOTE:

THIS EQUIPMENT IS TELEPHONE LINE POWERED. DURING PROGRAMMING THE CENTRAL OFFICE OR PBX MAY RESPOND TO THE PROGRAMMING CODES WITH VARIOUS BUSY TONE, REORDER TONE, RECORDINGS, ETC. THESE TONES AND RECORDINGS WILL HAVE NO EFFECT ON THE PROGRAMMING. PLEASE IGNORE THEM.

PROGRAMMING CONTINUED

LOCATION #00

Digit 1:

Always 0 for this model.

Digit 2:

0 No incoming calls allowed.

1 Incoming calls allowed.

Digit 3:

0 No time-out disconnect

1-9 Minutes time-out disconnect

Digit 4:

Always 0 for this model

Digit 5:

Always 1 for this model

Digit 6:

Always 0 for this model.

Digit 7:

Always 0 for this model

Digit 8:

Always 0 for this model

Digit 9:

Always 0 for this model

Digit 10:

0 No wink detect.

1-9 Length of the wink detect.

(1=50ms incremental to 450 ms. **5 is recommended**).

- Be sure to enter your selections below for future reference.

#00= 0 _ _ 0 1 0 0 0 0 5

DIGITS: 1 2 3 4 5 6 7 8 9 10

PROGRAMMING CONTINUED

- 3.9** When you are **finished** programming, **press the “CALL & HANGUP” button** to hang up the phone. Return the two plastic **mini-jumpers** to the **“OFF”** or outermost position, as depicted on the last page of this manual. Secure the telephone assembly in the housing. The phone is now ready for use.

4.0 OPERATION

To receive a call, press the "EMER/CALL" button located on the front of the phone, when the telephone rings. The LED (if provided) will illuminate red at this time. In order to receive incoming calls the phone must have been programmed with a "1" under Digit 2 in section 3.8 of this manual. When the call is answered, a normal speakerphone conversation may take place. After the call is complete, press the "EMER/CALL" button on the front of the panel again to hang up the phone. If the user does not press the button on the front of the panel when he or she is finished using the phone, then the phone will hang up after detecting a wink (open switch interval) or the timer times out.

If the telephone has been mated with external call equipment, a call may also be initiated by pressing the "EMER/CALL" button. The LED (if provided) will illuminate red at this time. The external call equipment should direct the call as intended and a normal speakerphone conversation may take place. After the call is complete, press the "EMER/CALL" button on the front of the panel again to hang up the phone. If the user does not press the button on the front of the panel when he or she is finished using the phone, then the phone will hang up after detecting a wink (open switch interval) or the timer times out.

5.0 RECOMMENDED TOOLS AND TEST EQUIPMENT

DTMF Test Set
Volt/Ohm Meter
CEECO Security Tool, 301-064


6.0 INSTALLATION NOTES AND ASSEMBLY INSTRUCTIONS

- 6.1 Using a 301-064 security tool (sold separately), loosen and remove the security screws.
- 6.2 The security tool is for a standard 5/32" button head screw generally used on the framework of the phone booths.
- 6.3 Separate the faceplate assembly from the weatherproof housing by pulling the faceplate forward.
- 6.4 Run the inside station wire into the enclosure and terminate on the RJ11C terminal block inside, as depicted on the following page. The CEECO provided terminal block (jack) **must** be used, as it contains required over-voltage protection circuitry.
- 6.5 The use of a gas tube station protector is recommended. The station ground should not exceed 50 ohms.
- 6.6 Plug the modular line cord from the faceplate assembly into the RJ11C terminal block.
- 6.7 Dress the telephone line cord and AC cable away from the security screws and seat the faceplate into the weatherproof housing.
- 6.8 Secure the cover assembly by tightening the security screws.

*******WARNING*******

- A. Never install telephone wiring during a lightning storm.**
- B. The telephone must be grounded in accordance with local and national electric codes.**
- C. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.**
- D. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.**
- E. Use caution when installing or modifying telephone lines.**

6.9 OVER-VOLTAGE PROTECTION DIAGRAM

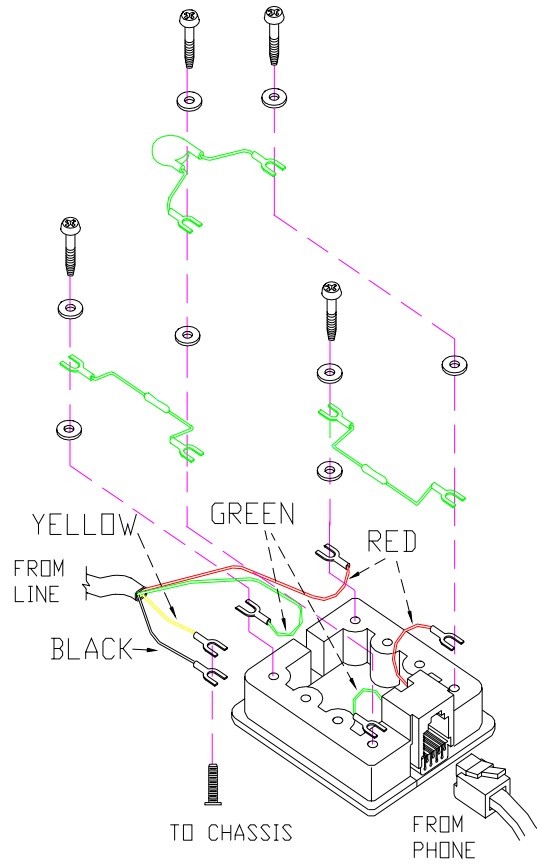

7.0 TESTING

- Action: Connect the telephone to a working telephone line.
Place a call to the telephone from another phone.
- Reaction: The telephone rings. Press the "EMER/CALL" button to answer the call. Provided the phone was programmed to allow incoming calls, a normal speakerphone conversation should transpire.
- Action: Finish the conversation.
Press the "EMER/CALL" button, or wait until time out occurs.
- Action: If the telephone has been mated with external call equipment, press the "EMER/CALL" button to initiate a call.
- Reaction: The external call equipment directs the call as intended and a normal speakerphone conversation is allowed when the called party answers.
- Action: Finish the conversation.
Press the "EMER/CALL" button, or wait until time out occurs.
- Action: If the phone was programmed to not allow incoming calls, try making a call to the phone.
- Reaction: The telephone will ring, but it will drop the line when it is answered and not allow a conversation to take place.

8.0 SPECIFICATIONS

INPUT POWER:	C.O. Line powered
LOOP CURRENT:	33 mA minimum 80 mA maximum
IMPEDANCE:	600 ohms
SIGNALING:	Manual on-off hook
ENVIRONMENTAL:	Temperature 0o C to 50o C Humidity 20%-90% non-condensating
PROGRAMMING:	Via DTMF keypad.
MEMORY RETENTION:	Non-volatile memory retention
DIMENSIONS: (SSP)	7 1/6" wide x 11 1/4" high x 4 1/4" deep (handset on hook).
MOUNTING:	Vertical surface mount.
WEIGHT:	Approximately 4 lb.
WEATHERPROOF HOUSING:	Cast aluminum
DIMENSIONS: (WPP)	9 1/2" wide x 12 5/8" high x 8" deep (including door).
MOUNTING:	4 holes spaced 8" x 5 7/8" x 13/32"
WEIGHT:	Approximately 12 pounds
FCC REGISTRATION NO.:	BW-88T7-68447-KX-T
TYPE JACK:	RJ11C
UL LISTED NO.:	6OF5

9.0 PARTS LIST

<u>QUANTITY</u>	<u>PART NUMBER</u>	<u>DESCRIPTION</u>
4	331-006	OUTER COVER SECURITY SCREW
1	301-018	MODULAR LINE CORD
1	531-11075	FACE PLATE
1	301-054	MODULAR CONNECTOR (RJ11C)
1	700-008	KEYPAD CABLE
1	660-000	CEECO SPK BOARD
1	705-110	CONNECTORIZED KEYPAD
1	14067	MICROPHONE.
1	6020	MOMENTARY PANEL SWITCH
1	14024	SPEAKER
1	331-005	WEATHERPROOF HOUSING (WPP)
1	331-010	STAINLESS STEEL PANEL.
1	401-009	RINGER
1	N/A	SERVICE MANUAL

ACCESSORIES:

1	301-064	SECURITY TOOL
---	---------	---------------

10.0 FCC NOTICE

10.1 FCC REGISTRATION AND REPAIR INFORMATION

Your new telephone has been registered with the Federal Communication Commission (FCC) in accordance with Part 68 of its rules. The FCC requires that you be advised of certain requirements involving the use of this telephone.

10.2 CONNECTION WITH THE NATIONWIDE TELEPHONE NETWORK

The FCC requires that you connect this telephone to the Nationwide Telephone Network through a registered jack provided by the Telephone Company in your area. This jack is a modular outlet, which you can order from your local telephone company.

10.3 NOTIFICATION TO THE TELEPHONE COMPANY

Before connecting this telephone, the FCC requires that you notify your local telephone company business office. The number is in the front of your phone book.

Tell them:

The "line" to which you will connect the telephone (that is, your phone number) and the telephone's FCC registration number and ringer equivalence number. These numbers are listed in Section 8.00.

The FCC further requires that you notify your local telephone company when permanently disconnecting this telephone.

11.0 REPAIR AND RETURN INFORMATION

11.1 WARRANTY REPAIR

Any device returned requiring warranty service, repair or credit must be accompanied with a "Return Material Authorization" (RMA) FORM. It must include: return-shipping instructions, original purchase order number and special marking instruction. A description of the trouble observed must be attached to the defective unit. This information must be inside the shipping container.

11.2 DIRECT ALL INQUIRES TO:

CEECO
Repair Department
1580 NW 65th Avenue
Plantation, FL 33313
(954) 587-5430
(954) 587-5440

11.3 NON-WARRANTY REPAIR

CEECO will repair equipment out of warranty for a set charge plus parts. The customer must pay the shipping costs both directions.

11.4 RETURN FOR CREDIT

Material may be returned for credit only with prior approval. Material authorized for return is subject to a 15% restocking charge based on the manufacturer's list price. Return RMA must be requested no later than 30 days after original shipment.

12.0 WARRANTY POLICY

12.1 GENERAL


CEECO products are guaranteed to be free of defects in material and workmanship for a period of 365 days from the date of original purchase. CEECO's obligation under this warranty is limited to repair or replacement of any part found to be defective by CEECO. Under no circumstances shall CEECO be liable for loss, damage, cost of repair or consequential damages of any kind, which have been caused by neglect, acts of God, abuse or improper operation of equipment.

12.2 PRINTED CIRCUIT BOARDS


Printed circuit boards should not be repaired in the field. If a unit is found to be faulty, replace it with another unit and return the faulty unit to CEECO for repair. Modifications by anyone other than CEECO will void the warranty.

13.0 DIAGRAM


Locate the mini jumpers on the corner of the PCB.

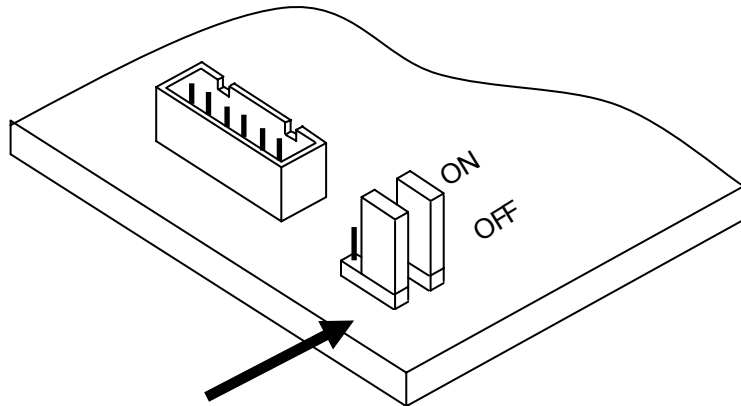

MOVE THE MINI JUMPERS TO THE **ON** POSITION **BEFORE** GOING OFF-HOOK.

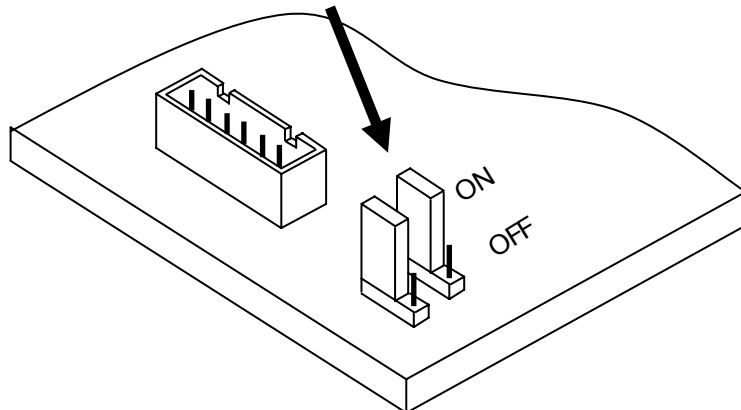

When programming is completed, move the mini jumpers to the **OFF** position.

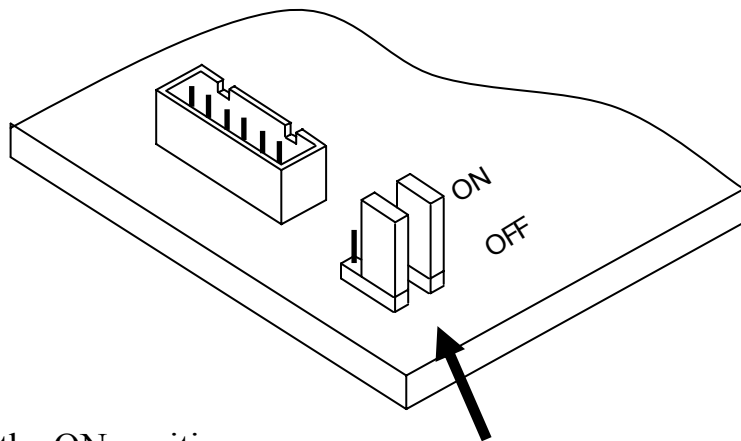

NOTE:

Do not leave the mini jumpers in the ON position, this will decrease battery life.